

Calibrating Unit

New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.: ARXA-0069
Location:	MARLBORO TWP. POLICE	
Calibration File No.:	00788	Calib. Date: 04/15/2019
Certification File No.:	00789	Cert. No.: 00041
Linearity File No.:	00790	Cert. No.: 00031
Solution File No.:	00807	Lin. No.: 00035
Sequential File No.:	00807	Soln. No.: 00205
		File Date: 07/24/2019

Calibrating Unit:	WET	Model No.: CU-34
Control Solution %:	0.100%	Serial No.: DDXC S3-0162
Solution Control Lot:	18290	Expires: 09/17/2020
		Bottle No.: 0663

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	08:47D		
Control 1 EC	0.097%	08:48D	34.0°C	*** TEST PASSED ***
Control 1 IR	0.097%	08:48D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:49D		
Control 2 EC	0.097%	08:49D	34.0°C	*** TEST PASSED ***
Control 2 IR	0.097%	08:49D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:50D		
Control 3 EC	0.097%	08:50D	34.0°C	*** TEST PASSED ***
Control 3 IR	0.098%	08:50D	34.0°C	*** TEST PASSED ***
Ambient Air Blank	0.000%	08:51D		

All tests within acceptable tolerance.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Changed By:

Last Name: CHAPLINSKI

First Name: JOSEPH



MI: S

Signature: _____



Badge No.: 061

Date: 07/24/2019

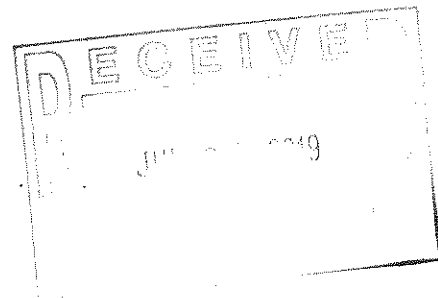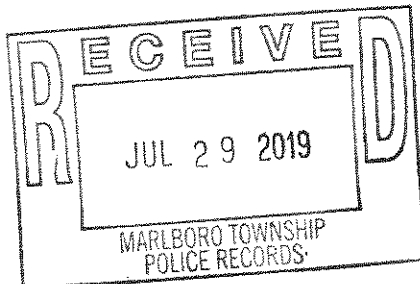

Calibrating Unit

New Standard Solution Report

Equipment	Alcotest 7110 MKIII-C	Serial No.:	ARXA-0069
Location:	MARLBORO TWP. POLICE		
Calibration File No.:	00788	Calib. Date:	04/15/2019
Certification File No.:	00789	Cert. Date:	04/15/2019
Linearity File No.:	00790	Lin. Date:	04/15/2019
Solution File No.:	00806	Soln. Date:	07/24/2019
Sequential File No.:	00806	File Date:	07/24/2019
Calibrating Unit:	WET	Model No.:	CU-34
Control Solution %:	0.100%	Serial No.:	DDXC S3-0162
Solution Control Lot:	18290	Expires:	09/17/2020
		Bottle No.:	0106

Function	Result	Time	Temperature	Comment(s)
	%BAC	HH:MM	Simulator (°C)	or Error(s)
Ambient Air Blank	0.000%	07:16D		
Control 1 EC	-.---%	07:17D	34.0°C	CTRL GAS SUPPLY
Control 1 IR	-.---%	07:17D	34.0°C	CTRL GAS SUPPLY
Ambient Air Blank	-.---%	--:--		
Control 2 EC	-.---%	--:--	N/A	
Control 2 IR	-.---%	--:--	N/A	
Ambient Air Blank	-.---%	--:--		
Control 3 EC	-.---%	--:--	N/A	
Control 3 IR	-.---%	--:--	N/A	
Ambient Air Blank	-.---%	--:--		

Test results are not within acceptable range.

On this date, I installed the above indicated "NEW SOLUTION" in accordance with Alcotest 7110 operator training and procedures established by the (NJSP) Chief Forensic Scientist.

Changed By:

Last Name: CHAPLINSKI

First Name: JOSEPH

MI: S

Signature: _____



Badge No.: 061

Date: 07/24/2019

